



guzzie+GUSS  
Connect+

Imported in North America by:  
Peter John M. Distributions Inc.  
#114 – 7951 – 72nd Street  
Delta, BC, Canada V4G 0A2

info@guzzieandguss.com  
CANADA: 1-888-597-0992  
Fax 1-604-940-4462

Please read this instruction manual carefully before using this product.  
Be sure to save these instructions for future reference.

Thank you,

We thank you for purchasing the guzzie+Guss Connect stroller. We understand that you as parents, choosing the stroller that suits you is always a difficult time before the baby arrives. We are honored that you have decided to trust us and to offer this gift to your little one. At guzzie+Guss, we are committed to developing quality products, clever and easy to use with great attention to make your life and that of your children easier so you can focus on more important things. We hope you and your baby will love your stroller.

## IMPORTANT

---

It is important that you read and follow the instructions in the manual. Please ensure that all parts are properly attached and moving parts in working order. Please pay special attention to the system of opening and closing the stroller. Read all warnings and safety precautions before using.

Having read and followed all instructions in this manual, please keep it in a safe place to review if necessary. If you have a problem with the assembly of the stroller or use, please contact guzzie+Guss at [info@guzzieandguss.com](mailto:info@guzzieandguss.com). A member of our team will be very happy to help you. You will be asked to provide us the product number and date of manufacture; this information can be found on the frame of your stroller.

## INCLUDED PARTS

---



# ! WARNINGS

## Please note the following to ensure safe use of your stroller

- Never leave child in the stroller unattended.
- Care must be taken when folding and unfolding the product to prevent finger entrapment.
- To avoid entrapment or pinching, do not fold or unfold stroller when child is in or within reach of the stroller.
- Avoid serious injury from falling or sliding out. Always use harness to secure your child.
- Do not use stroller for an infant younger than 6 months without an infant car seat or the Bassinet.
- Do not use stroller with a child who weighs more than 50 lbs (22.5kg).
- Do not use stroller with a child taller than 40 inches (101 cm).
- It is recommended to use the Connect Bassinet for infants under the age of 6 months old.
- Do not overload basket – Maximum weight in basket is 20 lbs (9kg). Overloading the basket may cause the stroller to become unstable.
- Always make certain that the stroller is fully open and locked in the open position before use.
- Assembly of this stroller must be performed only by an adult.
- Do not hang or place items such as bags on the stroller handle or frame (except for those approved by guzzie+Guss). They may cause the stroller to become unstable.
- Only use the guzzie+Guss universal car seat adapter when using the Connect with a car seat.
- Do not allow children to climb on or play with the stroller.
- Never use stroller on stairs or escalators.
- This stroller is intended for walking speed only. Do not use while jogging, skating, etc.
- Always set the brake when stroller is not moving.
- Only use accessories and replacement parts approved by guzzie+Guss.
- Do not lift the stroller by the front bumper bar of the seat.
- Read and understand these instructions before using this product.
- To ensure proper use, store this user guide in a convenient place so it can be consulted.
- Failure to follow all warnings and instructions could result in serious injury or death.
- When using an infant car seat with this product, refer to the infant car seat's user guide for maximum weights and other instructions.
- Do not use this stroller if there are any broken or missing parts.
- Do not exceed the manufacturer's maximum weight limit when using an infant car seat with the guzzie+Guss universal car seat adapter
- Maximum weight in the canopy pouch is 1 lbs (0.5 kgs)

## ASSEMBLY

### Opening the frame



To open the frame, release the frame lock.



Lift the frame up until it locks in place. Listen for the frame to click into place.

Test the frame to make sure it has locked.

### Attach the Front Wheels



Attach the front wheel by sliding the shaft into the front wheel housing, repeat on the other side.



To remove the wheels push the release button on the top of the wheel housing and slide the wheel out.

## ASSEMBLY

### Rear wheels



To attach the rear wheels insert the shaft into the rear wheel housing, repeat on the other side.



To remove the rear wheel pull the release tab on the underside of the housing and simultaneously slide the wheel out.

**NOTE:** For regular maintenance you should regularly remove your wheels and clean them and lubricate them.

### Seat



To attach the seat, align the seat connectors with the seat receptacles on the frame, then lower the seat connectors into them. Both sides should click in place; pull the seat up to confirm the seat has been properly attached.



To remove the seat lift up on the release levers (one on each side) and lift the seat up.

**WARNING:** Do not remove the seat with the child still in it.

## ASSEMBLY

### Attach the canopy



To attach the canopy, first attach the zipper at the back of the canopy. Then close the zipper.



Then line up one of the canopy ratchets over the post on the seat frame, (lining up the hole), and angle it onto the frame. Repeat on the other side.

### Bumper bar



To attach the front bumper bar, slide the silver post into the hole, repeat on the other side.



To remove the bar, find the release button on the bottom of the plastic housing.



### Swivel wheels



To set your front wheels to not swivel (locked position), slide the swivel lock up. To unlock, slide the tab down.

### Footrest



To adjust the footrest position, push in the release buttons on both sides, and raise or lower the footrest to the desired position.

### Using the safety harness



To use the 5-point harness, slide the shoulder strap into the waist strap buckle



Press the release button, then insert the buckle into the crotch buckle, repeat on the other side.  
To remove the straps, press the circular release button, and slide the waist straps out.

### Reclining the seat



To recline your seat, push in the recline buttons on each side, and recline to the desired position.

### Handle adjustment



To adjust the handle height, squeeze the release buttons on both sides of the handle and pull the handle to the desired height.



The shoulder harness is adjustable in height and can be changed by unthreading the shoulder strap from its current position and rethreading it through the shoulder belt positioning slot at the desired height.



The length of the shoulder straps can also be changed by sliding the buckle on each shoulder strap.

The waist belts are adjustable on either the right or left by using the adjustment buckles on the waist strap.

### Using the parking brake



To set your parking brake, push down on the lower portion of the brake lever.



To release the brakes, press down on the upper portion of the brake lever.

**NOTE:** Pull back on the stroller after you have released the brake to ensure that the brake has fully disengaged

### Folding the stroller



With the seat in the forward facing position or completely removed, pull up on the 2 slide releases (one on either side of the handle). Then lower the frame until the frame lock engages.



There is a carry handle on the frame for ease of transport.



**NOTE:** To facilitate folding and to avoid damaging the seat, the seat will stand alone. To do this, fold the footrest 90 degrees and place on the ground

**WARNING:** The child should not be in the seat during this procedure.  
**WARNING:** The child should not be in the stroller and should be kept away from it during the entire process of folding and unfolding.

## CARE & MAINTENANCE

---

**WARNING.** Check the rivets, brakes and accessories very carefully before using this stroller.

**WARNING.** Stop using this product if there is any damage or broken parts or pieces.

- Lubricate all moving parts and joints with a penetrating spray lubricant, from time to time.
- Remove front wheels from housings and clean thoroughly from time to time.
- Clean the stroller frame by wiping with moist cloth and dry thoroughly to prevent any rusting.
- Always wipe dry your stroller after using it in the rain or in winter climates, making sure road salt is removed from frame and joints. Allow the stroller to stand in an open, warm and ventilated place to dry.
- Do not leave your stroller outside in wet or hot/sunny weather, as the fabric could mildew or fade.
- Do not leave your stroller outside in cold weather as the cold could have adverse effects on the stroller.
- Only hand-wash the fabric by using mild detergent in cold water. DO NOT wash in machine. Hang in a ventilated place to dry. DO NOT tumble dry.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer or distributor.

If you have any questions regarding the product please contact guzzie + Guss at 1-888-597-0992, or online at [info@guzzieandguss.com](mailto:info@guzzieandguss.com).

## WARRANTY

---

Your guzzie+Guss item is warranted to be free from any manufacturing defects for 1 year from the date of purchase under normal use and in compliance with the operating instructions. This warranty cannot be extended and an extended warranty cannot be purchased. This warranty is not transferable and extends only to the original retail purchaser and is only valid when supplied with proof of purchase. **PLEASE RETAIN PROOF OF PURCHASE FOR THIS LIMITED WARRANTY.** The warranty is valid only in the original country of purchase (1 year on the frame and wheels, 90 days on the fabric).

This warranty is subject to the conditions set forth by country in which the items were purchased. Conditions may vary. guzzie+Guss will not ship replacement or repair parts out of the country of purchase. guzzie+Guss will provide replacement parts or conduct repairs as determined fitting by the company. guzzie+Guss reserves the right to exchange item with a replacement part. Some parts may be replaced with newer model parts as the items are improved over time. Please NOTE that all issues will NOT be covered by this warranty if it is deemed that your unit has been damaged because of misuse or neglect of regular maintenance.

Warranty is nullified if:

- The issue is caused by misuse or poor maintenance. Please refer to this instruction booklet for guidance on stroller use and maintenance.
  - Damage is caused by improper installation of guzzie+Guss parts and/or accessories. Please refer to this instruction booklet for guidance on stroller assembly and use.
  - Damage is corrosion, mold or rust caused by lack of maintenance or service.
  - Damage is due to general wear and tear, which is the result of everyday use or negligence.
  - Damage is caused by sun intensity, sweat, detergents, damp storage or frequent washings.
  - Repairs or modifications are carried out by an unauthorized third party.
  - Stroller is purchased from an unauthorized retailer. Approved retailers are listed on our website at [www.guzzieandguss.com](http://www.guzzieandguss.com)
  - Stroller is second-hand.
  - Stroller is damaged as a result of an accident, airline or freight damage.
- guzzie+Guss reserves the right to determine if warranty terms and conditions have been met. Please contact your local distributor if you have any questions regarding warranty.