
# IMPORTANT! KEEP FOR FUTURE REFERENCE



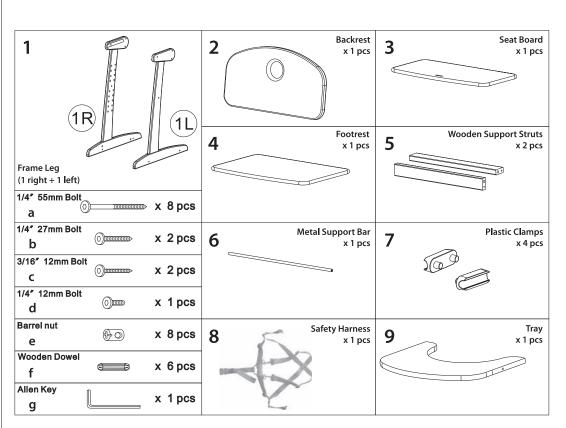

# **Assembly Instructions:**

# STEP 1

Required Components:



- (I). Insert barrel nuts (e) into the small holes and the wooden dowels (f) in to the largest holes on the ends of the wooden support struts(5).
- (II). Connect the wooden strut (5) to the Right Frame Leg (1R) by passing 1/4" 55mm bolt (a) through the lower holes of the frame and into the barrel nuts of the struts. Do not tighten at this point.

## STEP 2

#### Required Components:



(I). Repeat STEP 1 with left Frame Leg to assemble frame.




#### Required Components:



(I). Connect the backrest (2) to the frame by using 1/4" 55mm Bolt(a). Do not tighten at this point.

#### STEP 4

#### Required Components:

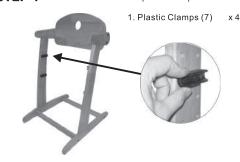

(I). Insert Plastic Clamps on each side frame, as photos show.

STEP 5

#### Required Components:



1. Seat Board (3)

(I). Put seat board between the gap of plastic clamps, as above photo shows.

WARNING: Please make sure to put the seat board between the plastic clamps. Adjust to fit equal distance from the front and back of the seat board.

STEP 6

#### Required Components:





(I). Put footrest between the gap of plastic clamps, as above photo shows.

WARNING: Please make sure to put the footrest between the plastic clamps. Adjust to fit equal distance from the front and back of the footrest.

#### STEP 7



#### Required Components:

1.	Meta	l Support Bar (6)	Х
2.	1/4″	27mm Bolt (b)	Χ

#### STEP 10

# Required Components: 1. Crotch strap (8) 2. 1/4" 12mm bolt (d)



2. 1/4" 12mm bolt (d) x 1 3. Allen Key (g) x 1

(I). Connect the metal support bar (6) to the frames by using the 1/4" 27mm Bolt(b). Do not tighten at this point.

(I) Connect the Tray (9) to the frames by using the 3/16"

27mm bolt(c). Do not tighten at this point.

(I). Connect crotch strap (8) to the bumper by using 1/4" 12mm bolt (d).

#### WARNING:

\* Crotch strap is only suitable for seat board on first and second height level of chair.

#### STEP 8



Required Components:

1.Tray(9)		
2.3/16"	27mm Bolt (b)	x2

#### **STEP 11**



(I). Insert buckle into the seat board. After making adjustments to the seat always re adjust the harness.

#### STEP 9

 


Now starting on one side, tighten up all bolts using the allen key.


#### WARNING:

Always ensure the harness is correctly fitted and adjusted prior to each and every use.

#### 5 Point Belt Installation



# 5 Point Belt Operation

 

- Place child in seat. Crotch strap comes up between child's legs. Both Lap Straps come around child from center of back and "CLICK" into Crotch Strap. Adjust length of Lap straps to secure child in seat.
- Press center button on Crotch Strap buckle to release child from belt.

Do always follow these instructions in order to avoid injuries. Please do carefully read the manual.

#### **SAFETY WARNINGS:**

- \* Keep the plastic packaging away from children to avoid danger of suffocation.
- \* Never leave your child unattended when sitting on the high chair.



- \* Make sure that any harness is correctly fitted.
- \* Do not use the high chair unless all components are correctly fitted and adjusted.
- \* Be aware of the risk of open fire and other sources of strong heat such as electric bar fires gas fires etc, in the vicinity of the high chair.
- \* Do not use the high chair until the child can sit up unaided.
- \* Do not use the high chair if any part is broken, torn or missing.
- \* Always use the crotch to avoid that your child falls out.
- \* Only for children up to 10 years or 60 kg.
- \* The seat position is not suitable for newborn children.
- \* Do frequently check all connections if they are still tight. If they are not tight enough anymore, please tighten them up again.
- \* Do not use the chair to step on.
- \* It is not allowed to make any changes to the chair, when they are not illustrated in this manual.
- \* Please pay extra attention to your child if they begin to kick away from the table or any other object, as high chair may become unstable.

#### **GENERAL CARE & CLEANING**

- \* The correct use and maintenance of this high chair is essential.
- \* Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.
- \* Clean wooden parts with a damp cloth and wipe dry with a soft cloth.
- \* Clean the harness with a mild soap and water solution. Rinse and wipe dry.