 

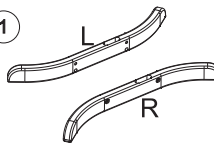
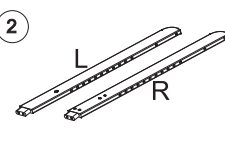
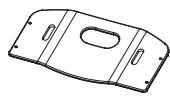

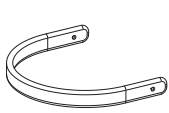



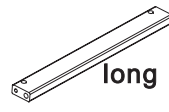
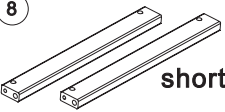
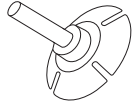

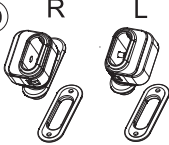
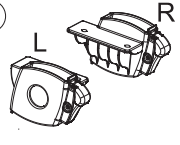
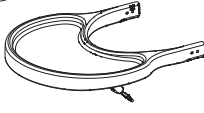

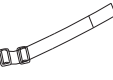




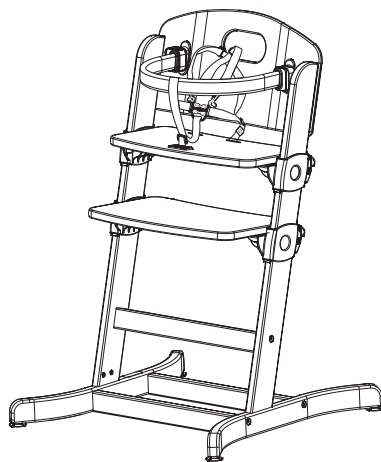

IMPORTANT! KEEP FOR FUTURE REFERENCE



Parts List

75mm ¼" Bolts A  x 2 pcs	1  Wooden Base x 2 pcs	2  Wooden Leg x 2 pcs	3  Backrest x 1 pcs
55mm ¼" Bolts B  x 6 pcs	4  Bumper Bar x 1 pcs	5  Seat Board x 1 pcs	6  Foot Board x 1 pcs
27mm ¼" Bolts C  x 4 pcs	7  Support Struts - Long x 1 pcs	8  Support Struts - Short x 2 pcs	9  Foot Pad x 4 pcs
15mm ¼" Bolts D  x 8 pcs	10  Connectors (R, L) x 2 pcs	11  Height Adjusters x 4 pcs	12  Feeding Tray x 1 pcs
12mm Bolts E  x 4 pcs	14  Crotch Strap x 1 pcs		
Barrel Nuts F  x 6 pcs	15  5-Point Harness x 1 pcs		
Wooden Dowels G  x 6 pcs			
Allen Key H  x 1 pcs			


Before beginning assembly, be sure all parts are present.

Step 1.

Required Parts:

Wooden Leg (2R)	x1
Wooden Base (1R)	x1
Barrel Nuts (F)	x2
75mm ¼" Bolts (A)	x2

 1. Insert wooden leg (2R) into the opening on wooden base (1R).
2. Insert barrel nuts (F) into the small holes and 75mm ¼" bolts into the holes under the wooden base (1R).
3. Do not tighten bolts at this time.

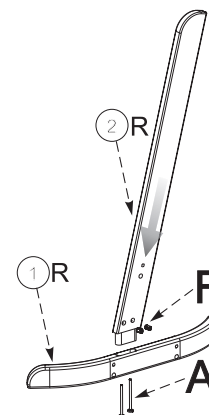


Step 2.

Required Parts:

Wooden Support Struts – Long (7)	x1
Wooden Support Struts – Short (8)	x2
Barrel Nuts (F)	x3
Wooden Dowels (G)	x3
55mm ¼" Bolts (B)	x2

 1. Insert wooden dowels (G) into the openings on the long wooden support struts (7) and the short struts (8).
2. Insert barrel nuts (F) into the openings on the long wooden support struts (7) and the short struts (8).
3. Connect the wooden support struts (7) and (8) to the side frame with the 55mm ¼" bolts (B).
5. Again, please do not yet tighten the bolts at this point.

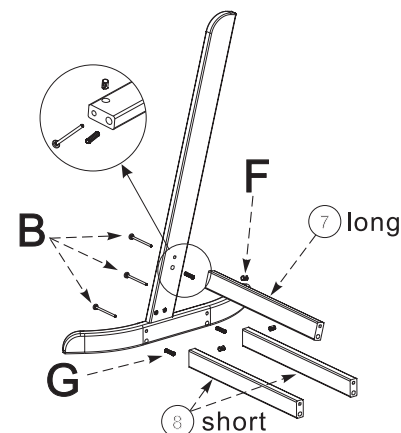



Step 3.

Required Parts:

Wooden Leg (2L)	x1
Wooden Base (1L)	x1
Barrel Nuts (F)	x3
Wooden Dowel (G)	x3
55mm ¼" Bolts (B)	x2
Foot Pad (9)	x4

  1. Assemble the left leg as you did the right leg (See Step 1).
2. Connect left side frame using 55mm ¼" bolts (B), barrel nuts (F), and the wooden dowels (G) as you did for the right side frame (see Step 2).
3. Install plastic foot pads (9) in the openings on the underside of the wooden base.
4. Again, please do not yet tighten the bolts.

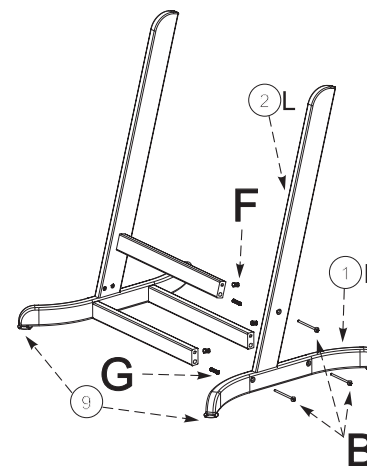

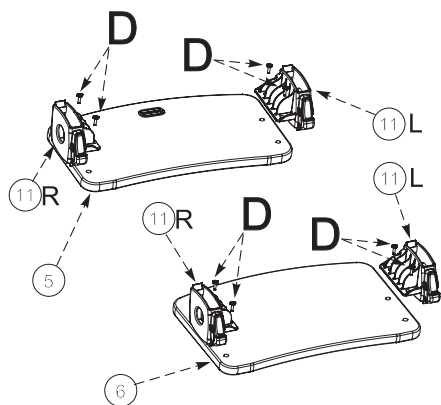


Step 4.

Required Parts:

Seat Board (5)	x1
Foot Board (6)	x1
Height Adjuster (11L)	x2
Height Adjuster (11R)	x2
15mm 1/4" Bolt (D)	x8

 1. Connect the height adjuster (11R) to the seat board (5) using the 15mm 1/4" bolts (D). Repeat for connecting (11L) to the seat board.
2. Repeat the above step to assemble the height adjusters (11R) and (11L) to the foot board (6).
3. Finally, you can tighten all bolts at this point.

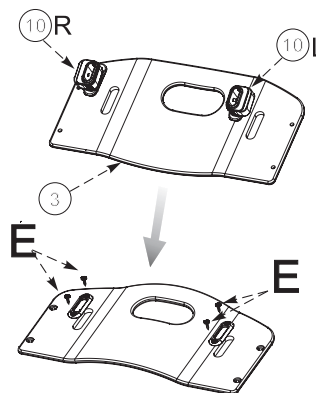


Step 6.

Required Parts:


Back Rest (3)	x1
Bumper Connector (10L)	x1
Bumper Connector (10R)	x1
12mm Bolt (E)	x4

 1. Connect the bumper connectors (10L) and (10R) to the back rest using the 12mm bolts (E).
2. Complete as shown in diagram to the left.
3. Please be sure to tighten all bolts at this point.

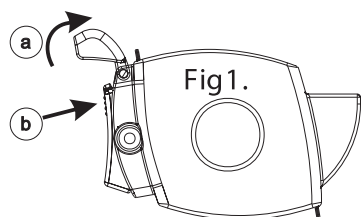


Using the height adjusters

 1. Lift the safety cap, then push the button (see fig. 1). Hold button in until you reach desired position.

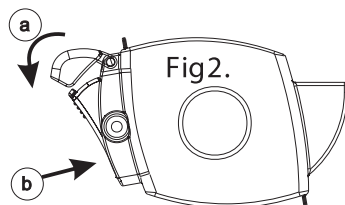

 2. When you have adjusted the seat board or foot board to the desired position, release the button and close the safety cap (see fig. 2).

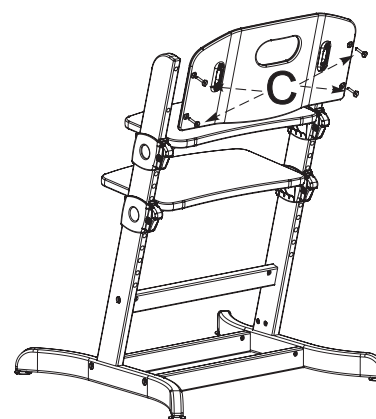


Step 7.

Required Parts:

27mm 1/4" Bolts (C)	x4
---------------------	----

 1. Connect the backrest to the wooden frame using the 27mm 1/4" bolts (C).
2. Tighten all bolts.

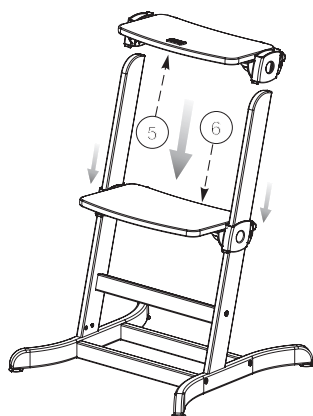


Step 5.

Required Parts:

Seat Board (5)	x1
Foot Board (6)	x1

 1. Slide the foot board onto the assembled wooden frame.
2. Repeat for the seat board.
3. Adjust to your desired position.

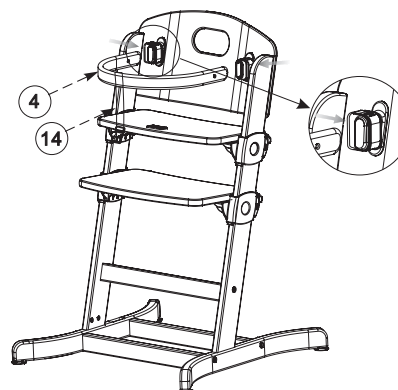



Step 8.

Required Parts:

Bumper Bar (4)	x1
Crotch Strap (14)	x1


1. Insert the bumper bar (4) through the loop on the crotch strap (14).
2. Insert the bumper bar into the plastic bumper connectors until you hear a "click".

  Installing the Tray

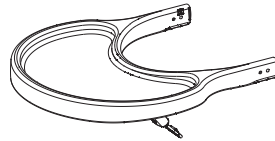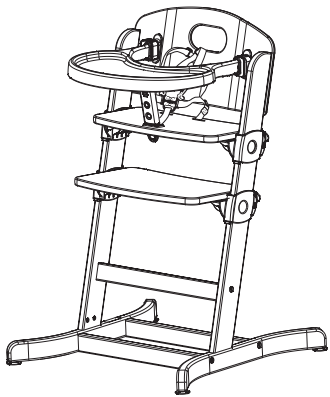


Step 1.

 1. Be sure to remove bumper bar from the plastic connector slots on the backrest.
2. Insert the feeding tray into the plastic connector slots on the backrest.
3. Insert crotch post into the opening hole on the seat board.

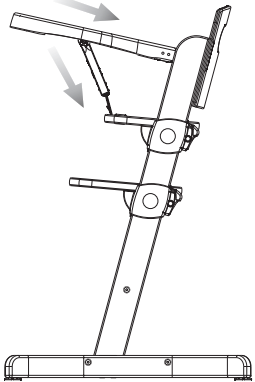


Step 2.

 
1. Ensure the tray is firmly inserted into the backrest by pressing the tray in until you hear a "click".
2. Ensure the crotch bar has been firmly inserted into the forward hole of the seat board.
3. Insert the harness buckle into the inner hole of the seat board.

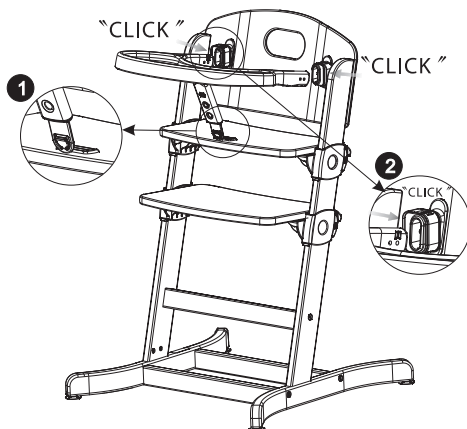

5 Point Belt Installation

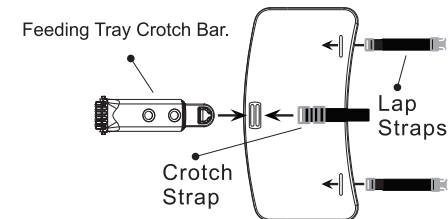 

5 Point Belt Operation

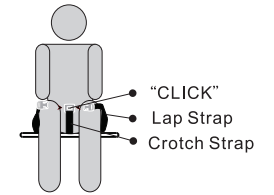 

Place child in seat. Crotch strap comes up between the child's legs. Both lap belts come around the child from the center of the back and "click" into the crotch strap. Be sure to adjust the length of the lap belts to secure the child in the seat.

Press centre button on the crotch strap to release child from the harness.


Adjustable Tray Positions:

 Fig 1.


 
When using the seat board in the upper position, please adjust the tray's crotch bar to the first position.

Fig 2.

 When using the seat board in the lower position, please adjust the tray's crotch bar to the second position.

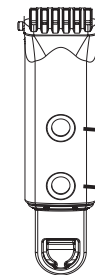


Feeding Tray Crotch Bar.

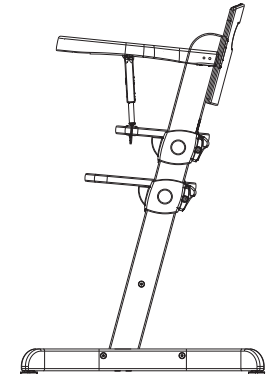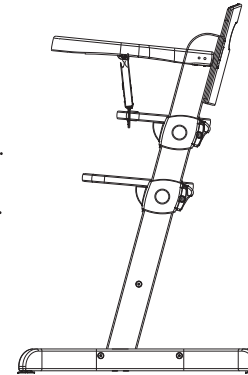

Always follow these instructions to avoid injury.
Read this manual carefully before using your new highchair.

SAFETY WARNINGS:

 - Keep the plastic packaging away from children to avoid the danger of suffocation.
- Never leave your child unattended.

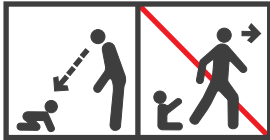

- Make sure that the harness is correctly fitted.
- Do not use this highchair unless all components are correctly attached and adjusted.
- Be aware of the risk of open flame and other sources of strong heat near the highchair.
- This highchair is not for use with children who are unable to sit up unassisted.
- Do not use this highchair if any parts are broken, torn or missing.
- Always use the supplied harness to avoid your child falling out of the seat.
- For use with children up to 10 years old, or 60kgs.
- This highchair is not suitable for use with newborns.
- Frequently check for loose parts, and tighten if necessary.
- This chair is not a step. Do not stand on it.
- Do not modify this chair in any way not described in this manual.
- Please be aware if your child begins to kick or push themselves back from tables or objects, as they may cause the chair to become unstable.

GENERAL CARE AND CLEANING

- The correct use and maintenance of this highchair is essential.
- Always ensure that the highchair is stored in a dry place to prevent mould or mildew from developing.
- Clean wooden parts with a damp cloth and wipe dry with a soft cloth.
- Clean the harness with a mild soap and water solution. Rinse and wipe dry.

WARRANTY

The G+G 212 has a Limited Warranty for the period of 1 year from the receipt of purchase against manufacturers' defects and workmanship.
For Warranty Registration:
submit online @ www.guzzieandguss.com
Or mail to the address provided below:

Imported by:
Peter John M. Distribution Inc.
88 SW Marine Drive, Vancouver, BC
Canada V5X 2R1

pjmdistribution.com
CANADA: 1-888-597-0992
Fax 1-604-324-2876